


Audi

A6 Avant 09/2018 >>
A6 Allroad Quattro 06/2019 >>
A6 Limousine 07/2018 >>
A7 Sportback 02/2018 >>

Part No: AU-077-07

Electric wiring kit for towbars / 7-pin / 12N / 12 Volt / ISO 1724 Fitting instructions

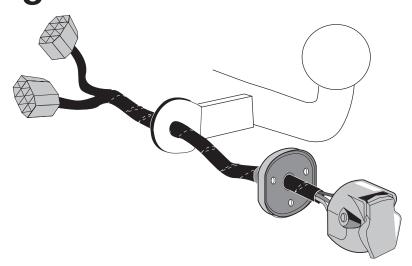



IMPORTANT!

This electric kit has to be installed by a professional workshop or a suitable qualified person.

The installation instructions must have been read and fully understood before the start of any installation. Please contact your wiring kit provider or the hotline shown in the footer should you need assistance!

Make sure the vehicle is approved/homologated by the manufacturer to tow a trailer!

Also please check that there is a definite compatibility between this vehicle and the electric kit!

Following the installation of the electric kit, the fitting instructions should be kept together with the vehicle service document and vehicle handbook. The fitting instructions contain important information relating to the use and function of the towing kit as well as for any diagnostic or activation process, that might have to be repeated in the future (e.g. after the performance of a vehicle software update).

All warranty claims will be forfeited if the electric kit or components contained therein are used incorrectly or modified. If a towing socket adaptor has been used to connect to the trailer or bike rack, this must be removed from the trailer socket once the trailer or bike rack has been disconnected.

If the trailer or bike rack is not equipped with a rear fog lamp, depending on the towing vehicle type, the correct function of the towing kit cannot be guaranteed. In such cases, a rear fog lamp should be retro fitted.

This towing electric kit will not be covered under warranty if any technical or electrical modifications or software updates have been performed by the vehicle manufacturer after the initial commissioning of the kit. That applies especially to modifications or updates which may cause malfunctions in the trailer socket or any other part of the trailer electrical equipment!

Depending on the type of trailer module used in this electric kit, diagnostic interrogation with the vehicle's electrical system may be limited or will not function. The error memory inside the trailer module may not be able to be accessed by vehicle manufacturers diagnostic system.

Error logs relating to the trailer electrical equipment, that may be generated in the vehicle manufacturers diagnostic system as a result of a test procedure, may be due to the incorrect installation of the towing electric kit or the false activation of the trailer module.

We always recommend whenever possible, the following troubleshooting process:

- → An analysis of the vehicle's error memory and possibly clearing of all faults before the start of the installation!
- Try disconnecting the trailer module from the towing harness and re-start the fault clearing process!
- → If in doubt, limit the time for troubleshooting to a max of 0,5 hours and call our Technical Support Team!

Please follow our instructions carefully and always test the towing electrics using a true lighting board or a specifically designed bulb tester. If an LED tester is used, ensure it is equipped with correct load resistors or malfunctions will occur!


This instruction is subject to changes and we reserve the right to make changes to design, colour etc.


All of the data and illustrations may not be an exact representation but the text contained in this instruction must be observed!

1/18

Right Connections UK Ltd Unit 503 Queensway Business Park TELFORD TF1 7UL UK

SALES: +44 (0)1952 608750 - Option 1 TECHNICAL: +44 (0)1952 608750 - Option 2 Web: www.rightconnections.co.uk Email: Technical@rightconnect.co.uk

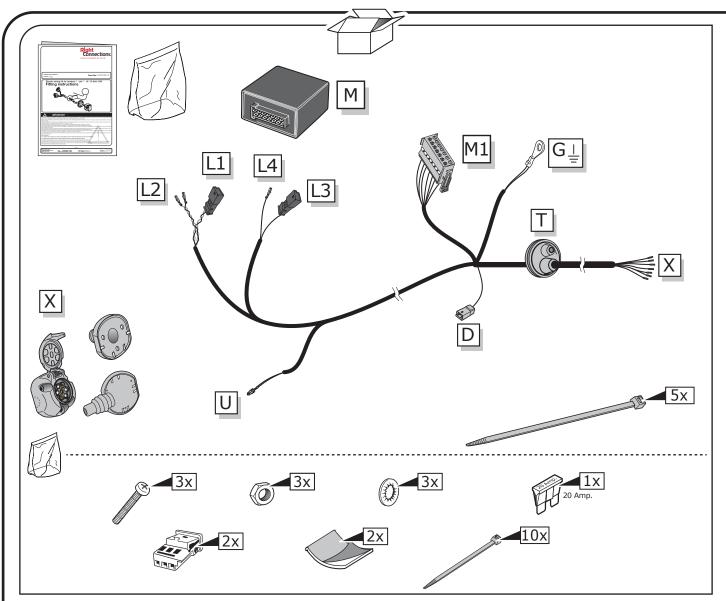

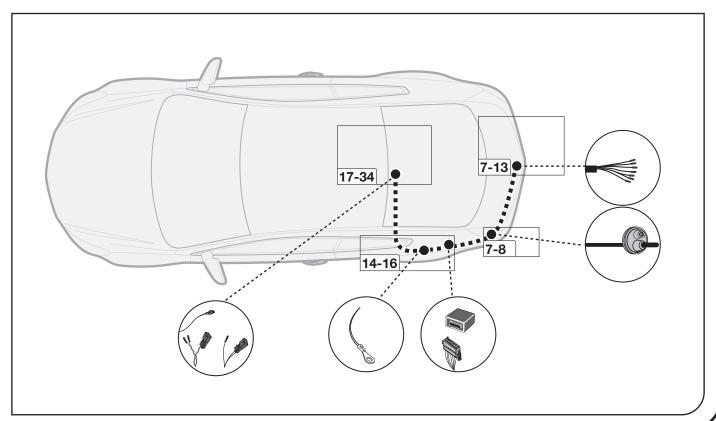



SYMBOL EXPLANATION

Left (58-L) respectively Right (58-R) tail light				
Stop light (54) / high mounted, third stop light (54)				
Turn signal indicator left				
Turn signal indicator right				
Rear fog light(s)				
Reversing light(s)				
Permanent power supply / 13pin socket, chamber 9				
Charging wire for trailer battery / 13pin socket, chamber 10				
Trailer / trailer recognition				
Permanent current power supply				
Ground or Earth (31)				
Ground connection battery terminal lug				
Positive connection battery terminal lug				

(12V)	Cigarette lighter / accessory socket				
	Loudspeaker / buzzer				
	Park Distance Control				
-/	Switch / source of function				
→	Connect together				
+	Disconnect				
4	Look at / See further information				
	Look carefully at selected area				
\bigvee	Present / Occupied / OK				
\mathbb{X}	Not present / Not occupied / Not OK				
D ((((Acoustic indication				
\triangle	Attention / important advice				
20 Amp.	Fuse / fuse capacity 20 Ampère				

 TOOLS

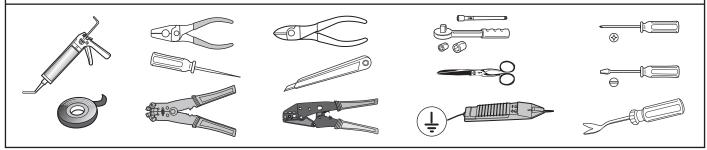



ATTENTION!

The vehicle's cooling capacity may have to be increased when retrofitting a trailer coupling! You must observe the manufacturer's instructions!!



a stored radio code before disconnecting the battery!


Code


ATTENTION!


In order to avoid mal-functions and damage to the vehicle's electrical system the earth terminal must be disconnected from the vehicle's battery before starting work!


Both the trailer module and the vehicle's control unit for the electrical system can be damaged during work on the data bus connections if the battery is not disconnected!


Please pay attention to the manufacturer's instructions when disconnecting and reconnecting the vehicle's battery!

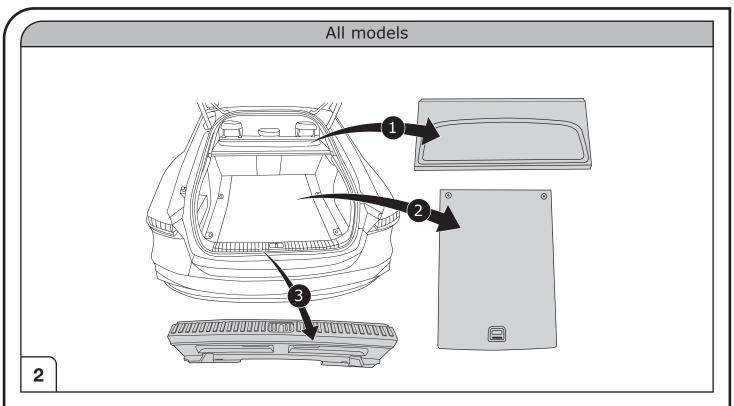


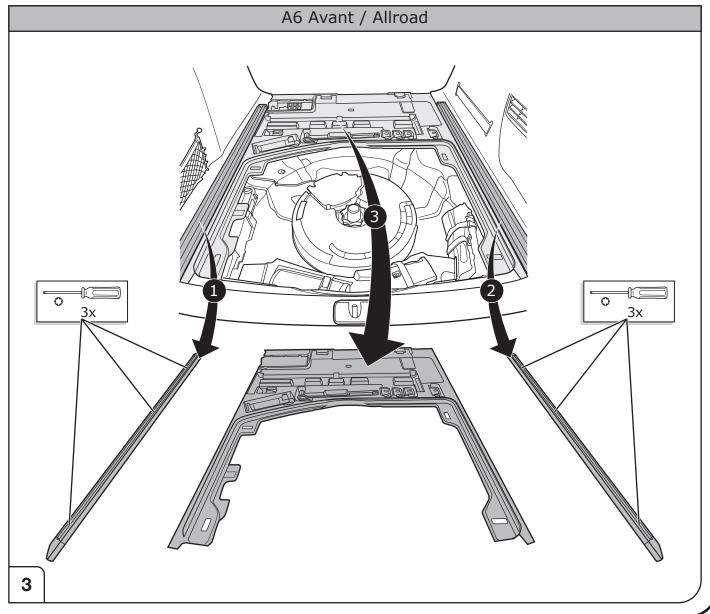


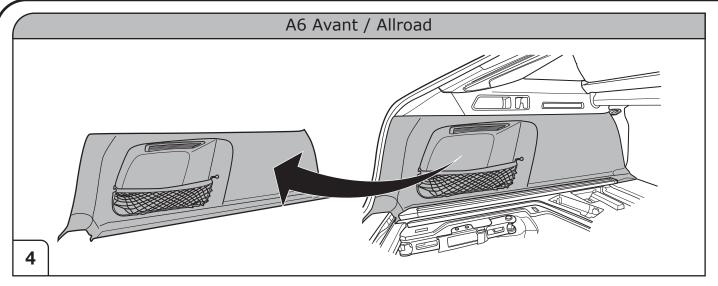


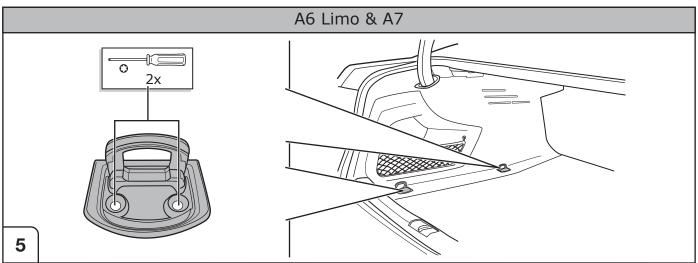

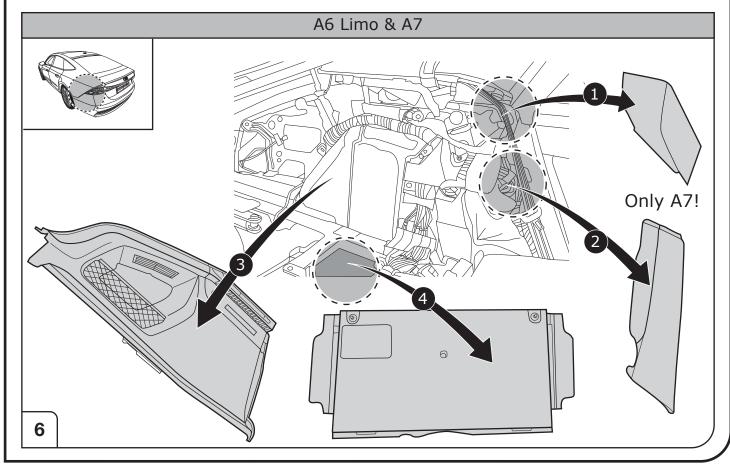

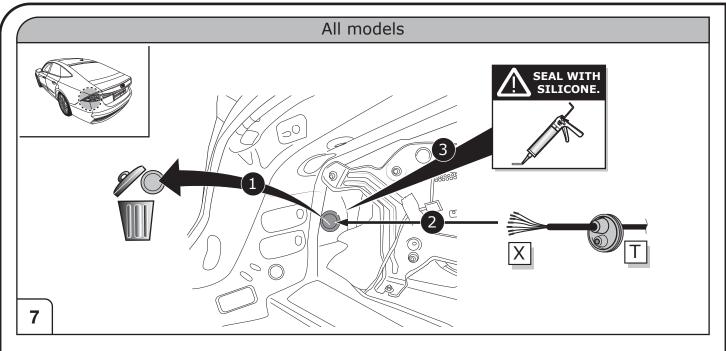

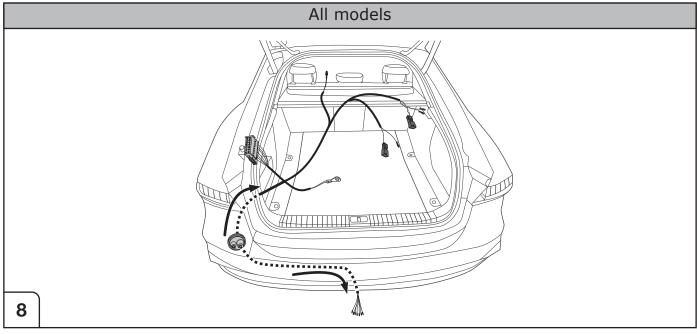


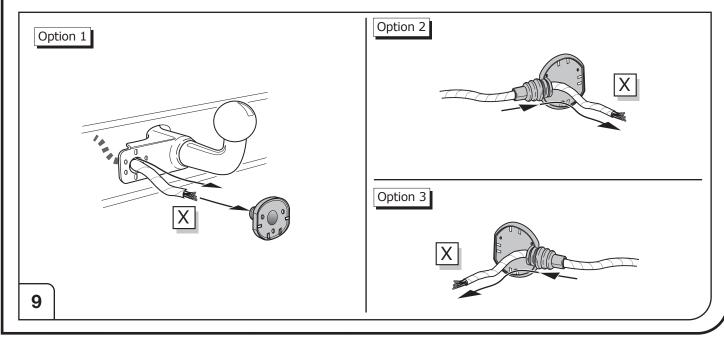



SOCKET CONNECTION


DIN/ISO	Çι	0≢	_ 1-7	R➪	-¤-	STOP	-\̈́\.
1724	1/L	2	3/31	4/R	5/58-R	6/54	7/58-L
Pmax	21W	21W		21W	52W	3x21W	52W
	Yellow	Blue	White	Green	Brown	Red	Black


10

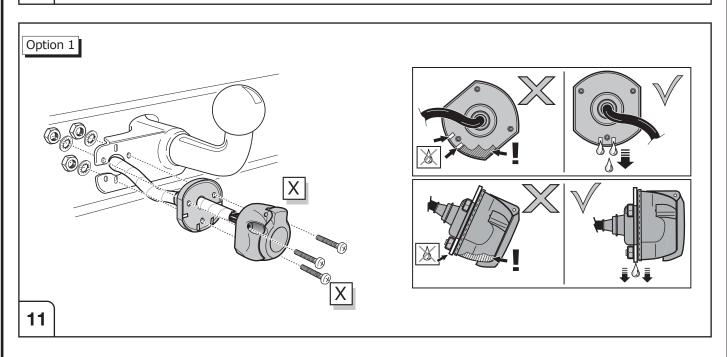


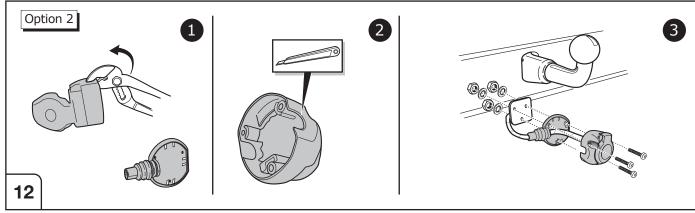


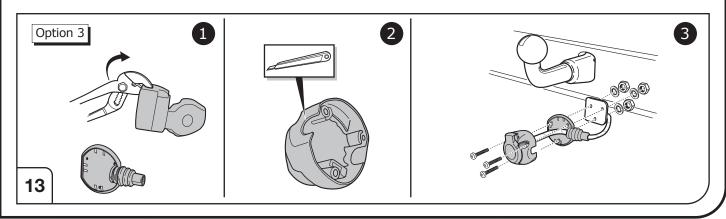


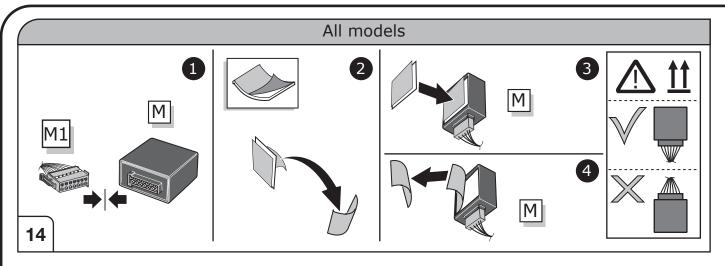


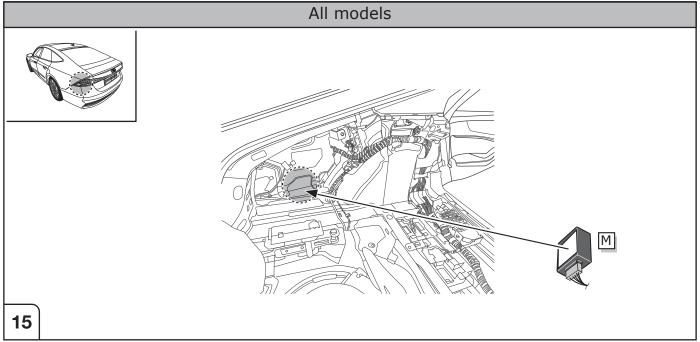


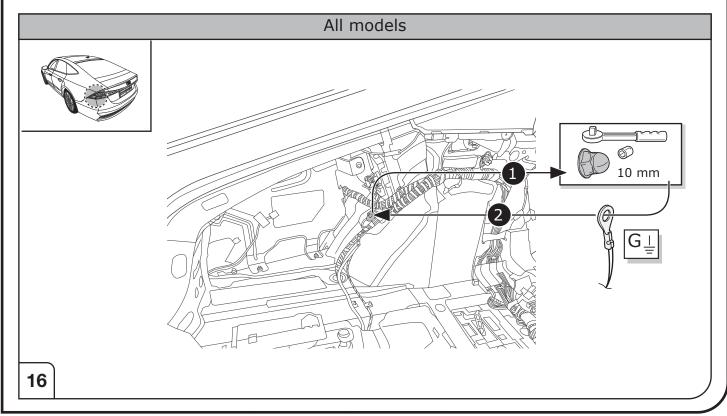


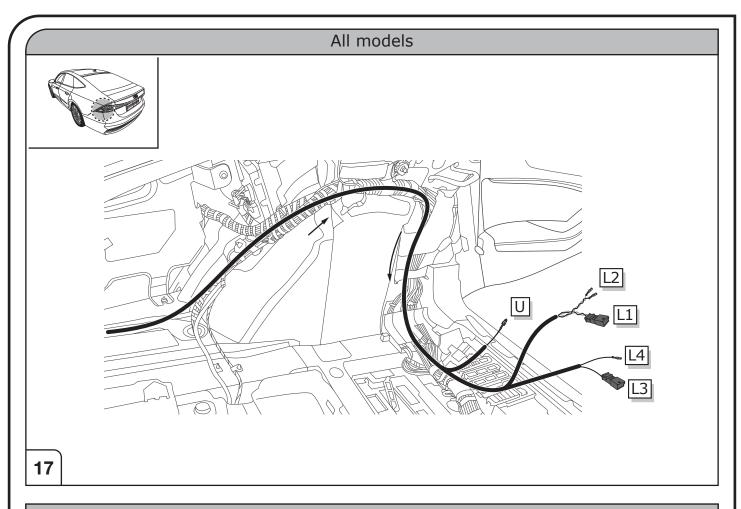


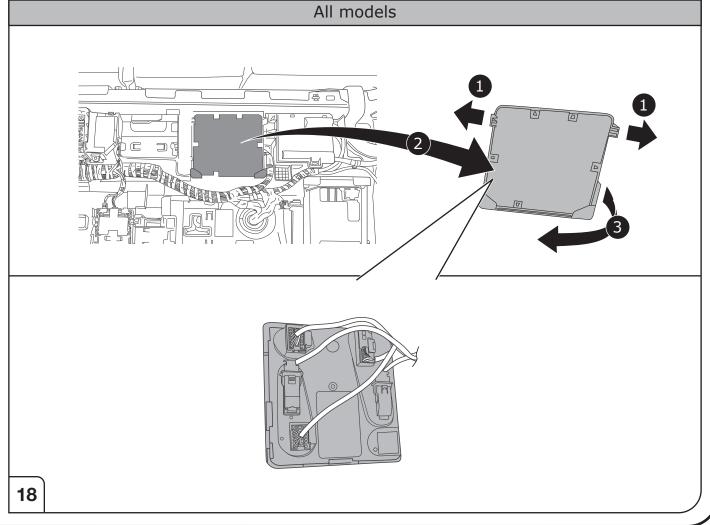


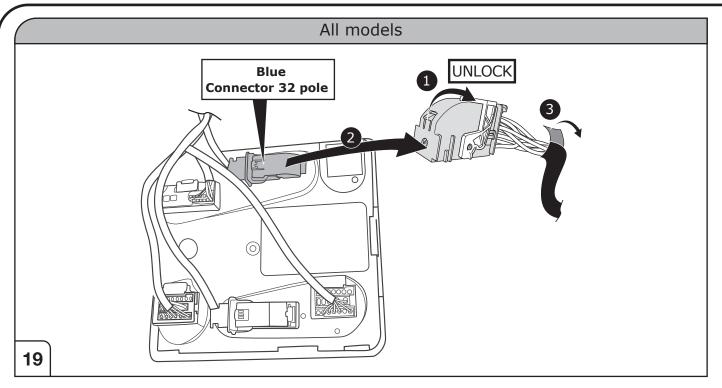


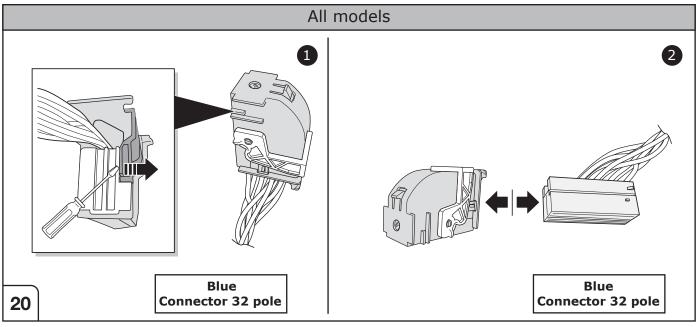


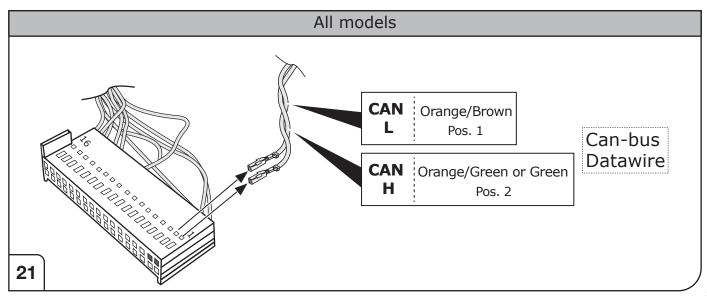


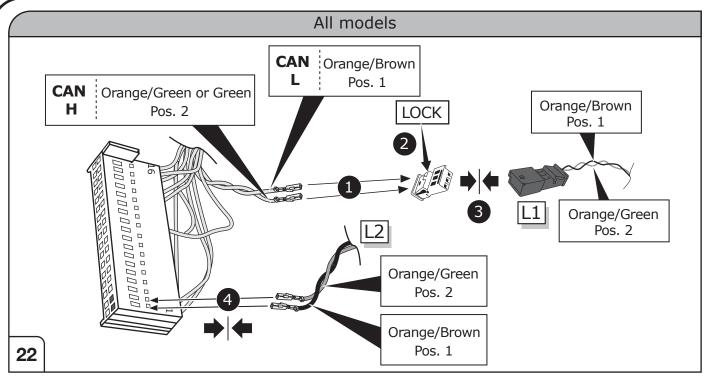


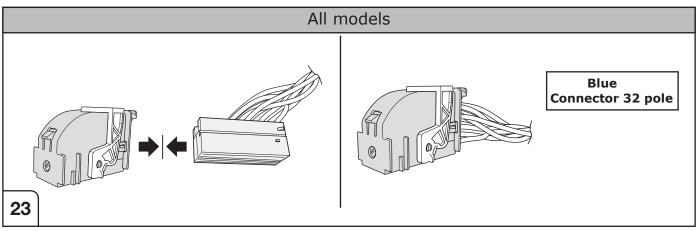


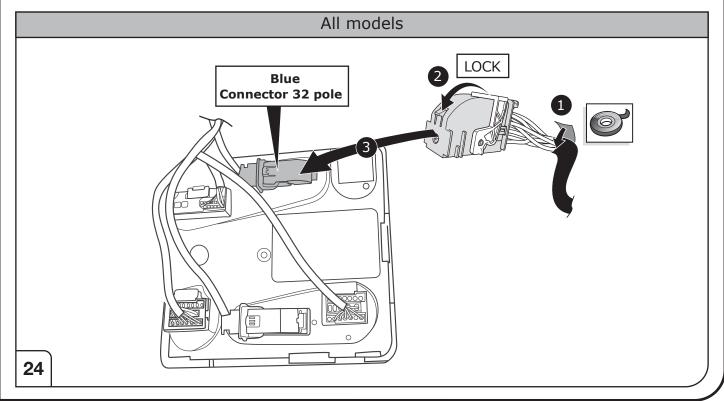


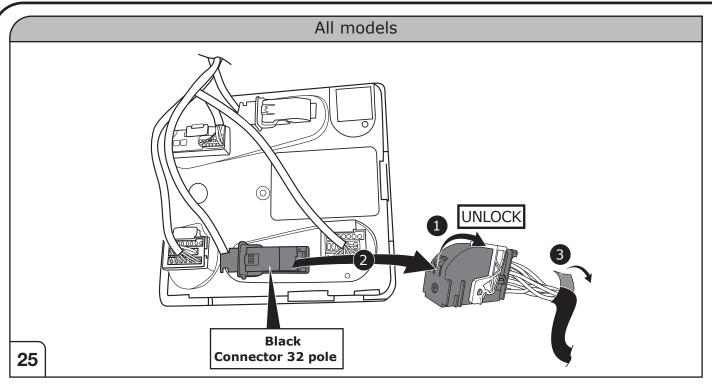


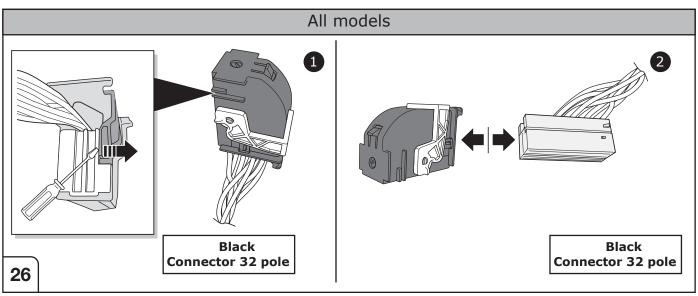


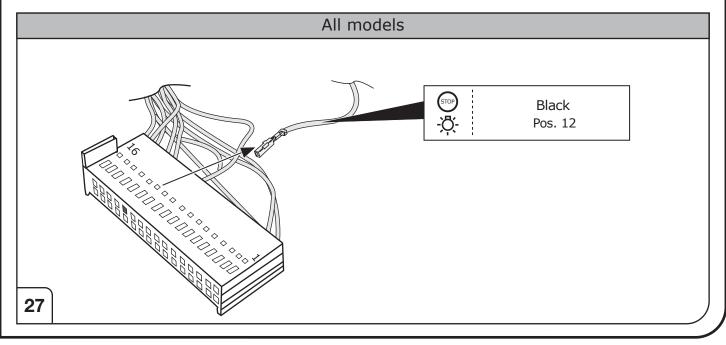


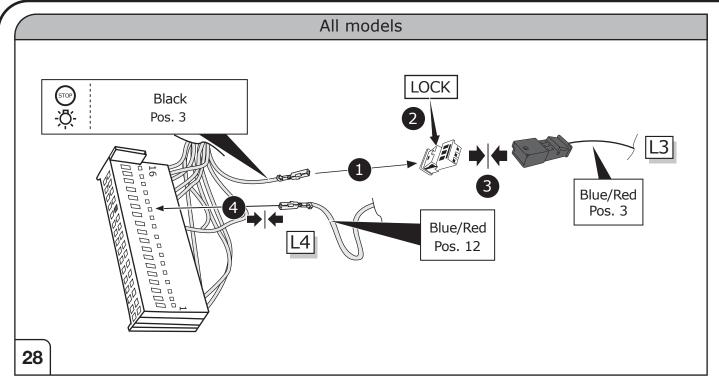


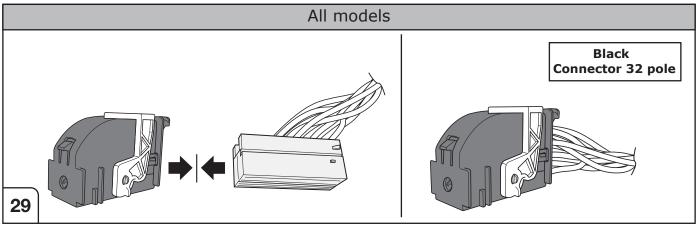


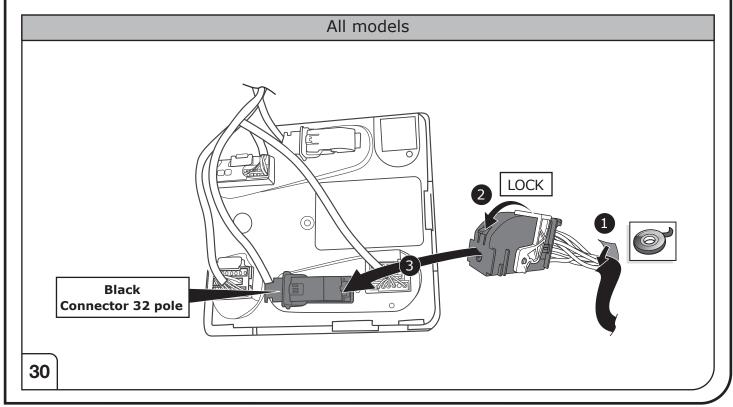


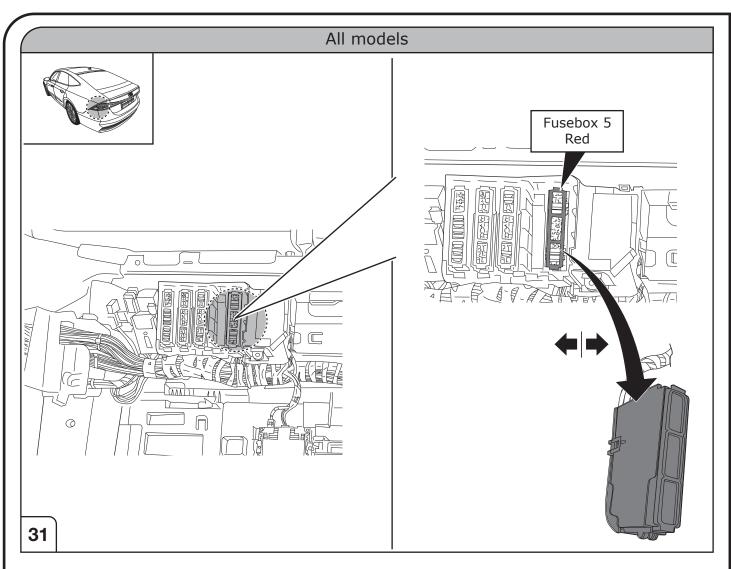


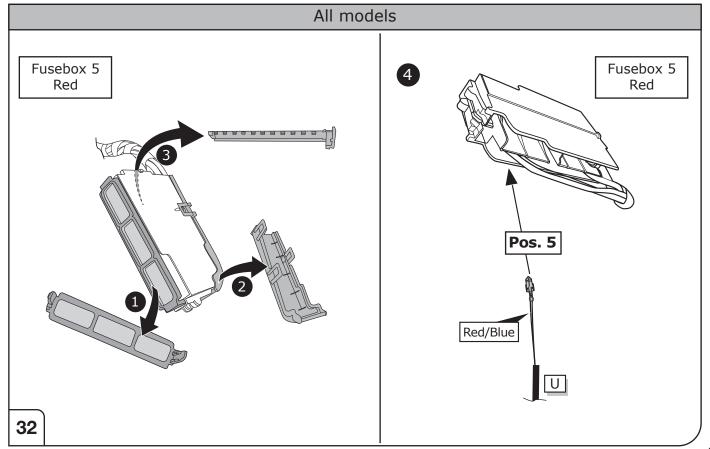

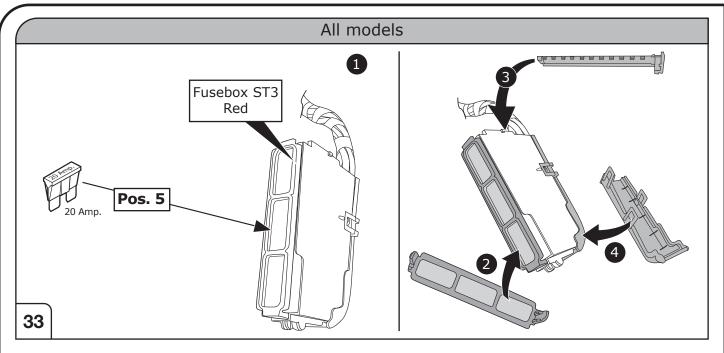

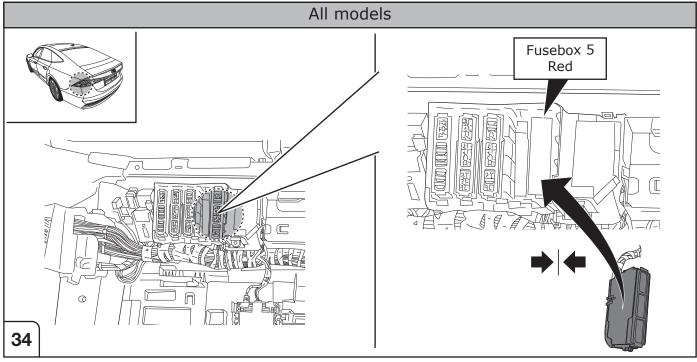

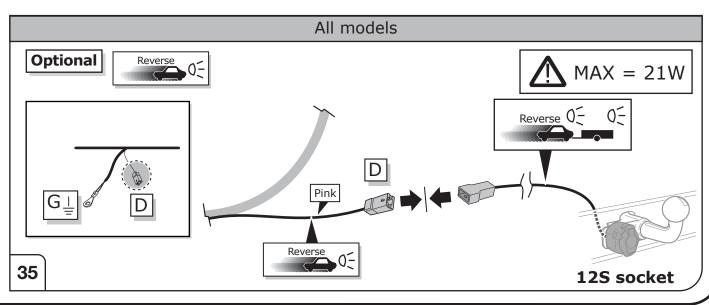


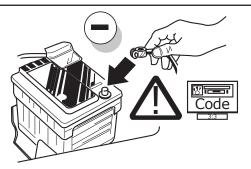

36

Set up trailer operation



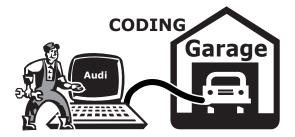

Diagnostic services and methods (local offline):

Please note:

Always use the latest diagnostic version. The vehicle to be coded must be supported by the diagnostic service provider and already be implemented in the diagnostic version. Please contact your diagnostic service provider in case of any question.

ATTENTION!

Model year 2021 vehicles are equipped with a so-called vehicle diagnosis protection (SFD). Make sure that access to locked on-board control units is granted by thediagnostic system. Possible diagnostic service providers:

- ODIS JIFELINE

CODING WITH ODIS

The procedure described below for encoding and enabling the trailer mode only serves for a general orientation and can vary greatly depending on the model (motorisation / equipment). If necessary less or further control units will have to be adapted.

After connecting to ODIS, the "69 trailer function" controller has to be set to encoded in the target installation list.

The following may be necessary in the further course of work:

EZE_09 (electronic central electric controller): Diagnosis

(possible login code: 31347)
Networking plan
Controller self-diagnosis
Encode

Trailer connection device or: hitch_ecu >installed

Alternative encoding EZE_09 as follows (MY 2017 >>): Self diagnose control unit

Access authorization >31347 Integration Trailer control unit > installed

ZKS_46 (Central module convenience system)

trailer monitoring trailer control unit >put on active >installed

SWA_3C (Lane Change Assist) >with ECU for draw har ECU for draw bar

SW2_CF (Lane Change Assist2)

ECU for draw bar > with ECU for draw bar

SCH_17 (Dash panel insert) Trailer >yes

RFK 6C (reverse camera system) equipment_ahk >installed

STF_74 (chassis control system)
Trailer >installed

EPH_76 (PDC controller)
Trailer >trailer device can be removed

manually

DIS_13 (controller distance control (possible login code: 20103) Control module for towing sens >installed

Alternative encoding DIS_13 as follows:

Self diagnose control unit Access authorization Encoding Binary encoding

Byte 3 Binary >xxxx1xxx or Hex

FFF_A5 (front sensor system controller) >coded

HDE_6D (boot lid electronics controller) >installed

Important note on encoding and activating in

trailer mode trailer mode
The aforementioned settings are carried out in the vehicle's electrical system and saved locally. During general updates for the vehicle software (for example, within the scope of service or repair work), the settings may be overwritten and deleted under certain circumstances. In this case, the trailer mode activation has to be updated again locally after the update. has to be updated again locally after the update. Diagnostic information relating to the trailer mode that may appear during variance comparisons with the data saved in the manufacturer's works, may form the basis of the local activation.

37

16/18

Right Connections UK Ltd Unit 503 Queensway Business Park TELFORD TF1 7UL UK

+44 (0)1952 608750 - Option 1 TECHNICAL: +44 (0)1952 608750 - Option 2


Web: www.rightconnections.co.uk Email: Technical@rightconnect.co.uk








38

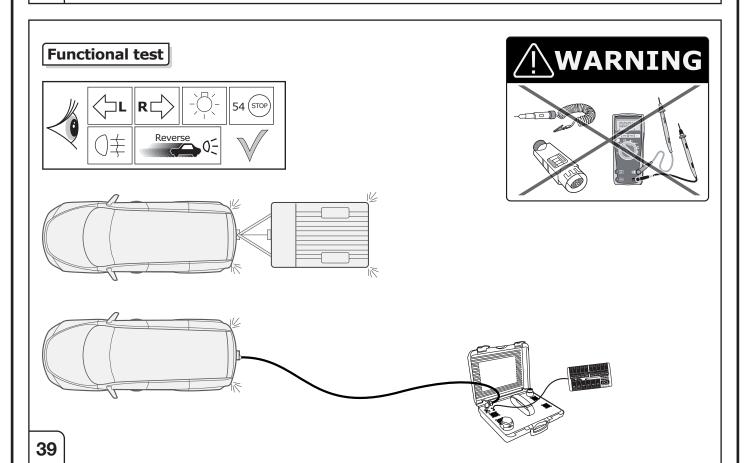


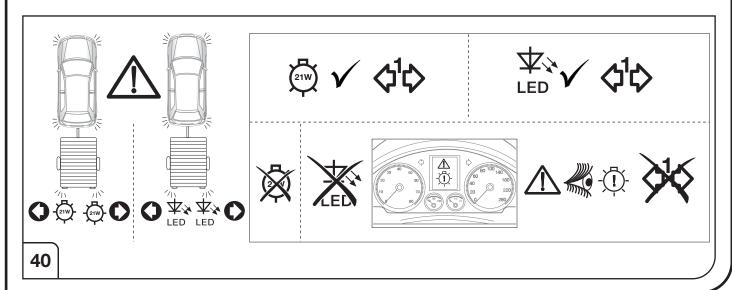



17/18

Right Connections UK Ltd Unit 503 Queensway Business Park TELFORD TF1 7UL UK SALES: +44 (0)1952 608750 - Option 1 TECHNICAL: +44 (0)1952 608750 - Option 2

Web: www.rightconnections.co.uk Email: Technical@rightconnect.co.uk

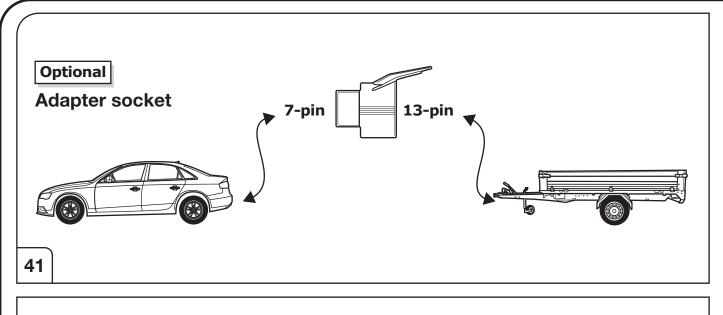

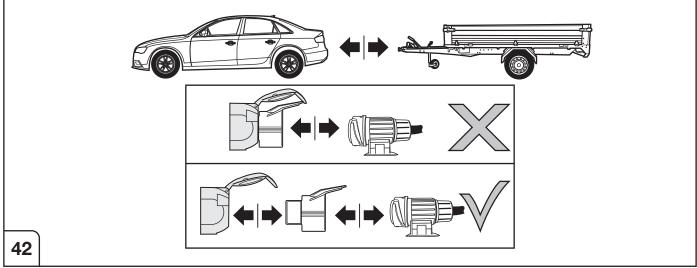

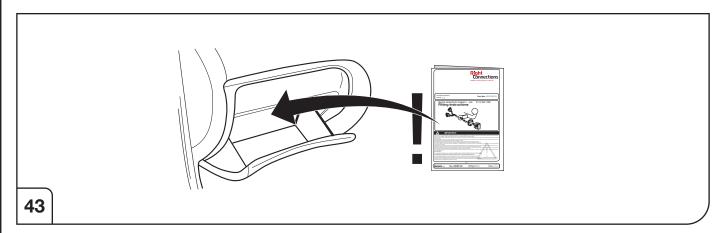

18/18